

LX500 INTRODUCTION:

Enjoy your favorite fragrance with our Luxury Desktop Scenting System. Easily filling 500 sq.ft. of space, the LX500 is portable, quiet and perfect for use in any room. The LX500 is very convenient and practical, and includes a remote control for simple functionality.



TECHNICAL PARAMETERS:

Weight : 2lbs
Voltage: DC12V
Coverage: 500sq ft

Oil bottle: 120ml
Power: 5W
Noise: <28 dba

- Parts Included are: LX500, Power Adapter, Oil Bottle, Atomizer Core, Remote Control.
- The Remote Control is designed to conveniently set the different fragrance concentrations levels to suit your desire along with the duration of time you want the unit to operate for.
- Unscrew LX500 oil bottle, pour your favorite all natural Brilliant Scents fragrance into it, power the unit on and enjoy your favorite scent.




HOW TO USE:



1. Unscrew the top part of the LX500



2. Add or replace the oil by unscrewing the oil container while standing straight up. Fill oil and tighten back the container.

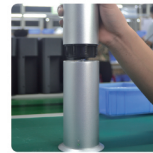

3. Place the top of the LX500 back in to tracks and tighten.



4. Connect to power cord and use the remote control to configure system settings.

LIGHT INDICATOR:



Blue light- receiving power.

Green light- System is working.

Red light- will flashing while pushing any buttons on the remote.


If your remote control gets lost and a replacement is needed, you can sync your new replacement remote with your existing unit by following the steps below:

- 1) Turn power off on the LX500 system
- 2) Press the 35% button and at the same time connect the power cord to the unit.
- 3) Wait for red light to come on and flash and now your new remote is successfully synced

MAINTENANCE TIPS:

If you do not use the LX500 system for a long period of time, clean the container prior to using it by using the KEEP IT CLEAN rinsing solution. Run it filled almost to the top of the oil bottle by first pressing AROMA on the remote and set the density at 95% for 20 minutes.

REMOTE CONTROL:

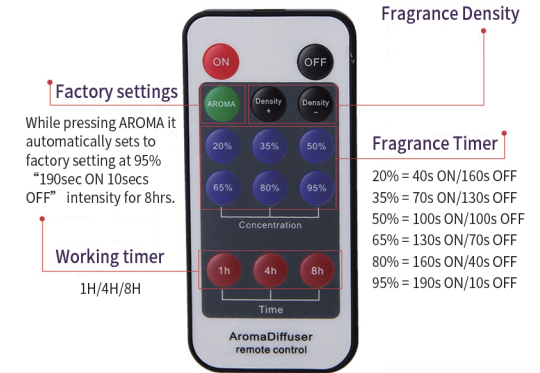


HOW TO USE REMOTE CONTROL:

- The remote control can set the fragrance concentration, Mist level, working hours and ON/OFF settings.
- 【ON】 Press it to start working.
- 【OFF】 Press it to stop working.
- 【AROMA】 Press aroma button to reset factory settings (while pressing AROMA it automatically sets to factory setting at 95% "190sec ON 10secs OFF" intensity for 8hrs).
- 【+】 Under the working period, Press it to increase the Mist Level. Each time increase 5%.
- 【-】 Under the working period, Press it to decrease the Mist Level. Each time increase 5%.
- 【20%】 【35%】 【50%】 【65%】 【80%】 【95%】 means aroma concentration setting (smell Level).
For example:
【20%】 means it work for 40S and stop for 160S.
【65%】 means it work for 130S and stop for 70S, total period is 200 S.
- 1H,4H,8H means working hours.

1H= 1 hours working
4H= 4 hours working
8H= 8 hours working

HOW TO CHANGE THE ATOMIZING CORE

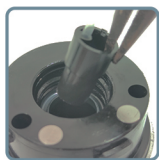

Step 1: Screw out the fragrance container , then pull out the inner part of atomizer. Then remove and replace atomizer core.



Step 2: The oil suction pipe is inserted into the small hole of the new atomizing core. Then install the atomizing head back into the body of the atomizing head.

HOW TO ADD AND CHANGE THE OIL

Using the LX500 unit for the first time, please unscrew the oil bottle top part of the unit and then unscrew the oil bottle to pour in your fragrance. Tighten the oil bottle before connecting the power cord. Once you connect the power cord after your oil is poured in you can now set your unit to operate to your liking using the remote.

When replacing the oil, please shut the system down then open the unit and proceed by unscrewing the oil bottle to refill it.

***Please note, do not ever lean or tilt the LX500 with oil inside of it as this may damage the air pump.**

WARRANTY

Your LX500 comes with a 1 year warranty. Please have proof of purchase on hand for warranty. Please note warranty is non transferable.

THE FOLLOWING IS NOT FOR FREE WARRANTY SERVICE

- Damage & problems caused by Accidents & Fire.
- Not use properly and wrong operation.
- If repaired by not professional person and make some parts damaged.
- Damaged during transportation.
- Without our warranty card.
- Without proper cleaning for a long time.
- Machines & Parts not from us.
- Machines not gotten from official channels.
- Send the machines back without permit from manufacturer.



BRILLIANT SCENTS LX500 USER MANUAL



LUXURY FOR A FEW SCENTS A DAY